

## Bosch 6112

### Radionics 6112 Basic Commands

Zones - 6 Hardwired

Battery - 12 volt rechargeable Gel-Cell inside main panel

AC Transformer is 16.5 volts, screwed into outlet somewhere in house

Wireless- No

Downloadable - Call Tech Support

Panic Panic - COMMAND + 9 (This may be silent on some systems)

Special Alert -COMMAND + 7 (sends specific alarm (Optional))

Arm Away - Enter Code + ENT key or COMMAND + 1 (All zone lights must be Off to arm)

Stay Arm - COMMAND + 3 (Motions are bypassed, doors/windows will still be delayed)

Instant Arm - COMMAND + 2 (Perimeter & Instant lights turn on, Motions will not arm)

Partial Arm - COMMAND + 8 (Arms all but open zones, bypasses motions)

Disarm - Enter Code + ENT key (Perimeter, Interior, Instant turn off)

Reset Alarm - Press COMMAND + 4 to stop keypad flashing and reset system

Reset Smoke - COMMAND + 4 + 7

(If this does not work power down system and set for service)

Bypass 1. Arm system with COMMAND + 1

2. Before Exit Delay expires press COMMAND + 0

3. Press zone to be bypassed (1, 2, 3 etc) + ENT key

4. Press ENT to end and allow system to finish arming

(Bypassed zones will flash slowly on display)

Force Bypass 1. Open door or window

2. Arm system with either User Code + ENT or  
COMMAND + 1, 2 or 3)

3. Keypad beeps indicating Zone is open

4. Press COMMAND + ENT to force bypass

(A forced bypassed zone may arm with rest of system  
if closed)

Door Chimes - COMMAND + 6 to turn On or Off

Alarm Memory - There is no Alarm Memory

Phone Test - COMMAND + 4 + 1 (If Phone test good system sounds 2  
second tone)

System Test - COMMAND + 4 + 4 (Press any key to end test)